 
 
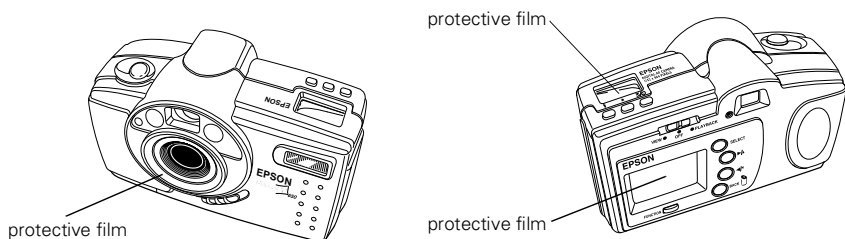 


Remove any protective plastic film you may find in these areas before using your camera:

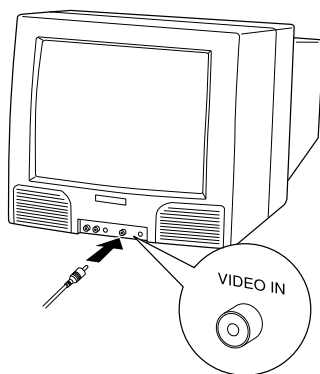

When playing back pictures on a television or recording them on videotape, ignore the steps beginning on page 3-11 of your manual. Instead, do the following:

- 1 Make sure the camera and TV (and VCR) are turned off.
- 2 Open the camera's card and port cover and connect the black end of the video cable to the **Video Out** port.
- 3 Connect the yellow end of the cable to the **VIDEO IN** port on the television or VCR.
- 4 Turn on the TV (and VCR) and switch to the correct video mode.
- 5 Turn on the camera and set the LCD monitor switch to **PLAYBACK**. The most recent picture appears on the TV screen.
- 6 Press the **▶/▲** or **◀/▼** button to move through your pictures.
- 7 To display or record your pictures as a slide show, hold down either the **▶/▲** or **◀/▼** button until you hear two beeps; then release the button. The camera now scrolls through the pictures.

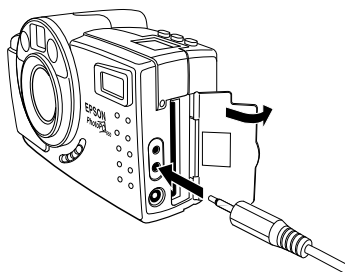

EPSON is a registered trademark of SEIKO EPSON CORPORATION. PhotoPC is a trademark of Epson America, Inc.



Notice to Windows[®] Users

If you are using the EPSON PhotoPC[®] 650 TWAIN software to delete individual photos within the camera, *do not attempt to delete locked images*. Attempting to do so may inadvertently delete other photos. We apologize for any inconvenience this may cause.

It is recommended that you first transfer all of your images to your computer before you delete photos, to safeguard against accidentally deleting the wrong photo.

A new CD-ROM will be available that solves this problem. Please contact end user technical support at (562) 276-4303 in order to receive an updated disk.

EPSON is a registered trademark of SEIKO EPSON CORPORATION.
PhotoPC is a registered trademark of Epson America, Inc.

Copyright © 1999 by Epson America, Inc.
Torrance, California, USA

CPD 9349
8/99